

Assembly Instructions :: Adirondack Ski Footstool

Green Mountain Ski Furniture

www.greenmtskifurniture.com



Contents:

- 1 footstool top (with skis)
- 2 back legs (wood)
- 4, 1-1/4" square drive stainless steel screws
- 2, 2" carriage bolts (stainless)
- 2 flat washers + 2 lock-washers (stainless)
- 2 nuts (stainless)

Tools Required:

- Square drive #2 bit or screwdriver
- 7/16" wrench or socket (or adjustable wrench)

Optional:

- Power drill-driver AKA: screw-gun (Recommended)



Step 1: Attach the back legs to the top

*(Note: The back legs attach to the inside of the top and **NOT** on the outside.)*

Each back leg is marked with a 1 or a 2 in pencil that corresponds with the same number on the inside of the top. Hold the correct sided leg in the **INSIDE** of the top, align the pre-drilled hole in both parts and push a carriage bolt through; as with the chair, **take care to align square underside of bolts with any square indents in the wood.**

Slide on 1 flat washer and 1 lock-washer for each bolt, and thread on the nut. While **applying thumb pressure to the round top** of the carriage bolt, tighten the nut until it just pulls into the wood and is flush on the outside. Repeat on the opposite side.

Be sure the back legs are properly aligned so they sit square on a flat surface (you may need to lightly tap in one direction or the other while the footstool is upright on a level surface). When they are square, fasten the 1 1/4" screws into the 2 pre-drilled screw holes on each side (4 total). *Be sure to leave the screws just flush, as they may poke through on the outside if they are driven in too deep.*

Step 2: Relax, put your feet up, and enjoy your recycled ski furniture!

Please contact us with any questions or for further assistance with assembly. Check us out on-line for other products and accessories or for more information.

email: info@greenmtskifurniture.com

phone: 802-324-1717

web: www.greenmtskifurniture.com